



## Ship's propeller disassembly

Prepare a simple removal tool to pull off to the propeller from the shaft

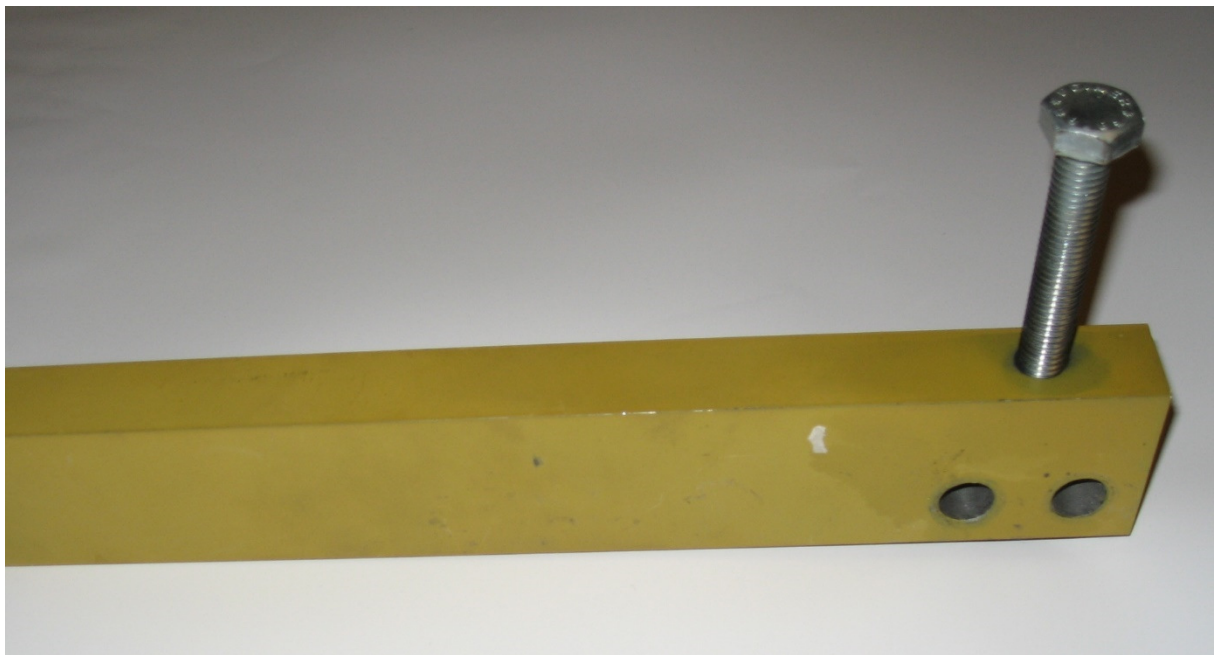

The dimensions must be determined for your propeller

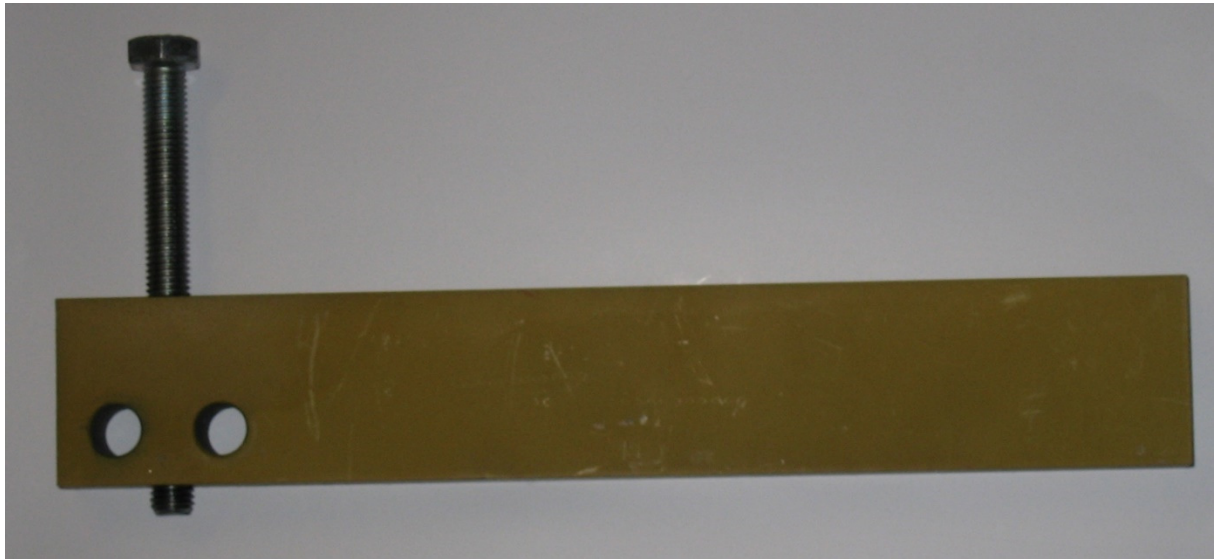

Subtract the body from the propeller shaft with the screw (M12)

Pay attention that the little feather didn't get lost!